

User guide

Model:F30



TABLE OF CONTENTS

THE BASICS

| | |
|--|----|
| Phone overview..... | 6 |
| Navigating your phone..... | 9 |
| Installing the battery..... | 10 |
| Removing the battery and SIM card..... | 11 |
| Turning your phone on and off..... | 14 |
| Home screen..... | 14 |
| Phone status Icons..... | 14 |
| Notifications..... | 16 |

CONVENIENT FEATURES

| | |
|------------------------------|----|
| Vibrate mode..... | 17 |
| Sound off..... | 17 |
| Quick Volume adjustment..... | 17 |
| Capturing a screenshot..... | 17 |
| Switching between calls..... | 17 |
| Three Way calling..... | 17 |
| Caller ID..... | 18 |

ENTERING TEXT

| | |
|-----------------------|----|
| Text input..... | 18 |
| Text input modes..... | 18 |

MAKING CALLS

| | |
|------------------------------------|----|
| Making calls from home screen..... | 18 |
| Making calls from contacts..... | 19 |
| Answering or Rejecting a Call..... | 19 |
| Answering calls..... | 19 |
| Rejecting/Ending calls..... | 19 |

RECENT CALLS

| | |
|---|----|
| Making calls using call log..... | 20 |
| Creating or updating contacts using call log..... | 20 |
| Deleting recent call records..... | 20 |
| Deleting all recent call records..... | 20 |

CONTACTS

| | |
|---|----|
| Adding a new contact..... | 21 |
| Adding a new contact from recent calls..... | 21 |
| Deleting a contact..... | 22 |
| Editing a contact..... | 22 |
| Contact list..... | 22 |
| Starting a number with pauses..... | 22 |
| Favorites..... | 23 |
| Groups..... | 23 |
| Speed dial..... | 24 |
| In Case of emergency (ICE)..... | 25 |

MESSAGE

| | |
|------------------|----|
| Message app..... | 25 |
|------------------|----|

INTERNET

| | |
|--------------------------------------|----|
| Entering a URL..... | 27 |
| Navigating through the internet..... | 27 |

CAMERA

| | |
|-------------------------|----|
| Taking a photo..... | 28 |
| Sharing content..... | 29 |
| Assigning pictures..... | 29 |

MUSIC

| | |
|---------------------|----|
| Playing a song..... | 30 |
| Music player..... | 30 |

RINGTONES

| | |
|----------------|----|
| Ringtones..... | 30 |
|----------------|----|

TOOLS

| | |
|------------------|----|
| Calendar..... | 31 |
| Alarm..... | 32 |
| World clock..... | 33 |
| Timer..... | 33 |

| | |
|-------------------|----|
| Stopwatch..... | 34 |
| Calculator..... | 34 |
| Notepad..... | 35 |
| File manager..... | 35 |

WIRELESS & NETWORK

| | |
|------------------------|----|
| Airplane mode..... | 35 |
| Wi-Fi..... | 36 |
| Bluetooth..... | 37 |
| Cellular networks..... | 37 |
| Emergency alerts..... | 37 |

ACCESSIBILITY

| | |
|--------------------------------|----|
| Readouts..... | 38 |
| Font size..... | 38 |
| Color correction..... | 39 |
| Mono audio..... | 39 |
| TTY mode..... | 39 |
| Real-time text (RTT) call..... | 39 |

SOUND SETTINGS

| | |
|------------------------------|----|
| Volume..... | 40 |
| Phone ringtones..... | 41 |
| Vibration pattern..... | 41 |
| Notification sounds..... | 41 |
| Alarm sound..... | 41 |
| Keypad Volume..... | 41 |
| Keypad tone..... | 42 |
| Vibration on keypad off..... | 42 |
| Battery tone..... | 42 |
| Emergency tone..... | 42 |

DISPLAY

| | |
|------------------------|----|
| Brightness level..... | 43 |
| Wallpaper..... | 43 |
| Display backlight..... | 43 |
| Keypad backlight..... | 43 |
| Font size..... | 43 |
| Main clock..... | 43 |

PHONE SETTINGS

| | |
|-----------------------|----|
| Language..... | 44 |
| Navigation keys..... | 44 |
| Storage..... | 44 |
| USB connection..... | 44 |
| Location..... | 45 |
| Security..... | 45 |
| Reset..... | 45 |
| Date and time..... | 46 |
| Advanced calling..... | 46 |

CALL SETTINGS

| | |
|-----------------------|----|
| Flip open/close..... | 46 |
| Auto Answer..... | 47 |
| Quick responses..... | 47 |
| Speed dial..... | 47 |
| Voicecall..... | 47 |
| Blocked calls..... | 47 |
| Auto redial..... | 48 |
| Call forwarding..... | 48 |
| Call timer..... | 48 |
| Assisted dialing..... | 49 |

ABOUT PHONE

| | |
|------------------|----|
| About Phone..... | 49 |
|------------------|----|

SOFTWARE UPDATE

| | |
|----------------------|----|
| Software Update..... | 49 |
|----------------------|----|

PROGRAMMING INSTRUCTIONS FOR ANS F30

| | |
|--|----|
| Initial Activation / Programming Instructions..... | 50 |
|--|----|

IMPORTANT SAFETY INFORMATION

| | |
|--|----|
| General Precautions | 50 |
| Using Your Phone While Driving | 51 |
| Following Safety Guidelines | 51 |
| Using Your Phone Near Other Electronic Devices | 51 |

PRODUCT SAFETY

| | |
|---|----|
| FCC REGULATIONS | 52 |
| RF Exposure Information (SAR) | 53 |
| Hearing Aid Compatibility (HAC) Regulations for Mobile Phones | 54 |
| Disposal of Lithium Ion (Li-Ion) Batteries | 55 |
| American Network Solutions Limited Warranty Period | 55 |
| Warranty Information | 55 |
| Limited Warranty Statement | 55 |
| Customer Service and Warranty Claims | 57 |

The Basics


Phone Overview – Open View



- 1 Earpiece** - Allows you to hear the caller and automated prompts.
- 2 Soft Keys** - Allows you to select the corresponding command at the lower left or right displayed in the screen.
- 3 Home key** - Access the home screen.
- 4 Send Key** - Allows you to make and answer calls. Press from standby mode to access your call history (all calls, missed calls, dialed calls and received calls).
- 5 Clear Key** - Quick press deletes spaces and characters | hold to delete entire text entry | press to back out of menus, one level at a time.
- 6 Microphone** - Transmit your voice to caller or for voice activated functions (e.g., Voice commands).

- 7 Navigation Key** - To scroll through menu items and highlight fields or objects.
- 8 Menu/OK** - To select options and menu options
- 9 End/Power key** - Turns the power on/off, ends calls and exits menus. Also returns to home screen.
- 10 Camera** - Allows you to access the camera.
- 11 Numeric Keypad** - From the home screen pressing numeric keys allows to access to default shortcuts. Keys will also allow entering phone numbers and alphabetical text.
- 12 Vibrate mode key** - Allows you to set Vibrate mode from standby mode (the Home screen), press and hold for about 3 seconds.
- 13 Home screen** - Displays messages, indicator icons and active functions.

Side View

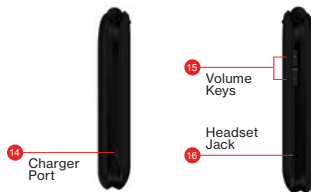

- 14 USB/Charger Port** - Connects the phone to the USB charger, or other compatible accessories.
- 15 Volume Key** - Allows you to adjust the volume.
- 16 Headset Jack** - Allows you to plug in an optional 3.5mm headset for convenient, hands-free conversations or other compatible listening devices.

Front/Back View



- 17 **Exterior Screen** - Displays messages and notifications.
- 18 **Camera** - Camera Lens
- 19 **Speaker** - Allows you to hear sounds emitted from your phone as well as media content (e.g., music and ringtones).



- 20 **Micro SD Card Slot** - Allows you to insert an optional microSD card for external memory storage.
- 21 **Battery** - Removable 1400 mAh battery
- 22 **SIM Card Slot** - Nano SIM card slot
- 23 **Back Cover** - Protects the internal components of your phone.





Note:

- It's important to fully charge the battery before using the phone for the first time.
- Battery life and signal strength are significant factors (among others) that affect your phone's ability to send/receive calls or data transfer.

Navigating your Phone


You can navigate within your phone's software by pressing the key that corresponds with the action you want to take or using the Navigation key  to scroll and the OK key  to select a highlighted item.

For example:

- Press the Left soft key  to select the item displayed at the bottom left of the screen.
- Press the Right soft key  to select the item displayed at the bottom right of the screen.
- Press the keypad key that corresponds to the item you want in a displayed list.
- Press the top, bottom or sides of the Navigation key  to move the cursor, then press the center of the Navigation key  (the OK key) to select the item displayed at the bottom center of the screen.

Navigating Keys

Navigate through your phone's software using your phone's 4-way directional Navigation key to scroll and select items. Its outer bottom can be pressed up, down, left or right to move within the current screen to browse through menus and lists, then its center can be pressed to select the highlighted item.



From the Home screen, pressing the Navigation key up, down, left or right launches corresponding application. Shortcut menu presents a secondary list of shortcuts that you can customize to include your favorite features. You can customize all of these shortcuts. For more information, see Key shortcuts on page 68.



Installing the battery

Step 1. Remove the back cover

With the phone facing down, insert your fingernail into the cutout located on the bottom of the back cover and gently lift the cover.



Step 2. Insert the battery

Insert the battery, making sure the gold contacts line up. Push in and press down gently to secure.



Step 3. Replace the back cover

Place the back cover over the back of the phone and then press down along the edges to secure.



Step 4. Charge the phone

Before turning on your phone, charge it fully. Insert the small end of the USB cable into the phone. Insert the larger end into the charger and plug the charger into an outlet.



WARNING! Use only approved chargers with your phone. Incompatible chargers or tampering with the charging port could damage your phone and void the warranty.

TIP: Extend your battery's life:

Conserve battery power by adjusting the settings on select applications:
Lower Screen brightness.
Reduce Backlight time.

Removing the Battery and SIM Card

1. With the phone facing down, insert your fingernail into the cutout located on the bottom of the back cover and gently lift the cover.



2. Use the fingertip cutout at the bottom of the battery compartment to lift the battery out.



Removing the SIM card

The SIM card is pre-installed in your phone. If you need to replace your SIM card, refer to the following instructions.

1. Turn the phone off, then remove the back cover and the battery (as demonstrated in the previous instructions).
2. Locate the slot for the SIM card and gently slide the SIM card tray down to unlock tray.
3. Your SIM is now accessible by opening the tray.



Inserting and Removing a Memory Card

Inserting a microSD card

1. Remove the back cover (as demonstrated in the previous instructions).
2. Position the microSD card (sold separately) with the label side facing up and the gold contacts toward the slot (at the upper-right side of the phone), then carefully slide the SD tray to the right to unlock it, then place the SD card in place and lock the tray by sliding left.

NOTES

- The microSD card can be easily damaged by improper operation. Please be careful when inserting, removing, or handling it.
- The device can support up to a 128GB microSD card.

To remove the microSD card

Follow the steps on page 10, Inserting a micro SD card (1,2).

Charging Your Phone

Your phone comes with a USB cable and a charger adapter. You can connect them together and charge from a power outlet, or you can use the USB cable alone to charge from your computer. Correctly orient the plugs before insertion to avoid damaging your cable, adapter, and/or ports.

NOTE

Please use only an approved charging accessory to charge your ANS phone. Improper handling of the charging port, and use of an incompatible charger, may cause damage to your device and void the warranty.

1. Correctly orient the USB cable with the charger adapter and connect them. Refer to the image below to correctly connect the USB cable and the adapter.



2. The USB/Charger port is located at the right side of the phone. Correctly orient the cable's plug with the port before plugging it in.

3. Plug the charger adapter into a power outlet to begin charging.

Turning your phone on and off

To turn your phone on or off, press and hold the End/Power key.

Home Screen

The Home screen is your starting point to access all of the features on your phone using simple key presses.

Status Bar
Shows phone status information, including the time, signal strength, battery status, and notification icons.



Customizing the Home screen

You can customize your Home screen wallpaper and clock format using the Settings app. From the Home screen, press the OK key Menu, Tools & Settings, OK, press the 2 key, then press the 4 key to select Display settings.

Wallpaper: Press the 2 key to select Wallpaper, select a background image from pre-loaded images or your own pictures, press Select, Done.

Clock Format: Press the 6 to select Main clock, select On or Off, then press OK.

Phone's status icons

The Status Bar appears at the top of every screen. It displays icons indicating that you've received notifications (on the left) and icons indicating the phone's status (on the right), along with the current time.

The following icons may appear in the Status Bar.

Call icons

| | | | |
|--|------------------|--|-------------|
| | Call | | Missed call |
| | Microphone muted | | |

Sound icons

| | | | |
|--|---------------|--|--------------|
| | Silent mode | | Vibrate mode |
| | Music playing | | |

Network icons

| | | | |
|--|--------------------|--|---------------------|
| | 4G LTE connected | | Download successful |
| | No signal | | Roaming |
| | Emergency Alert | | No SIM card |
| | Unknown SIM card | | Airplane mode |
| | SIM card activated | | Downloading |
| | Uploading | | Signal strength |

Connectivity icons

| | | | |
|--|-----------------------|--|-----------------------------------|
| | Headset connected | | USB connected |
| | Internal storage full | | Headset with microphone connected |






Messaging icons

| | | | |
|--|---------|--|---------------|
| | Message | | New voicemail |
|--|---------|--|---------------|


Alarm and Calendar icons

| | | | |
|--|-----------|--|----------|
| | Alarm set | | Calendar |
|--|-----------|--|----------|

Battery icons

| | | | |
|---|--------------|--|------------------|
|  | Full battery |  | Charging battery |
|  | Low battery |  | Empty battery |
|  | Not Charging | | |

Other icons

| | | | |
|---|---------|--|--|
|  | Gallery | | |
|---|---------|--|--|

Call logs icons

| | | | |
|---|---------------|---|---------------|
|  | Incoming call |  | Outgoing call |
|  | Missed call |  | Rejected call |

Notifications

Notification icons report the arrival of new messages, calendar events, alarms, as well as ongoing events, such as when you're on a call. When you receive a notification, the notification icon will be displayed in the Status Bar. You can open the Notifications view to view a list of all of your recent notifications. Depending on your settings, you may hear a notification sound, see a notification light, and/or the phone may vibrate.

To open the Notifications view

From the Home screen, press the Down Navigation key to open the Notifications view. The Notifications view displays a list of your current notifications, organized into ongoing and event-based notifications.

To respond to a notification

Open the Notifications view. Your current notifications are listed in the view, each with a brief description.

Press the OK key  Open to view the details of a highlighted notification.


Press the Left soft key  Dismiss to delete a highlighted notification.

Press the Right soft key  Options to clear all notifications or access options for a highlighted notification.

Convenient Features

Vibrate mode

Sets the phone to vibrate instead of ringing.

From the Home screen, press and hold the Vibrate mode key , then OK. To return to Normal mode, press and hold the Vibrate mode key again, and then OK.

Sounds off

Quickly deactivate your phone's sounds when you're in a place where phone sounds would be disruptive.


From the Home screen, press and hold the Volume down key to set vibrate mode, press the Volume down key once more to set Alarm only, and then press Volume down key one more time to select All sounds off, Set. To return to normal sounds mode, press and hold the Volume up key until the desired volume level is reached.


Quick volume adjustment

Quickly adjust ringer and earpiece volumes by pressing the Volume key on the left side of the phone. Press the Volume up key to increase and the Volume down key to decrease the volume.

NOTE: The earpiece volume can only be adjusted during a call. You can also disable keypad sounds through the Sound & Notifications Settings menu.

Capturing a Screenshot



Press and hold the Volume down key and the End/Power  at the same time for 2 seconds to key capture a screenshot of the the main display.

With a micro SD card installed. From the home screen, press the Navigation key up  to open Browser, options, press the 5 Key.

To view the captured image, from Home screen press the OK key  Menu, then Gallery.

Switching Between Current Calls

When on a call, a beep will alert you that another call is coming in and display Caller ID detail on the screen.

- Press Send key  to answer the call. This action puts the first call on hold.
- Press Send key  again to return to the first call.

Three Way call

You can talk with two people at the same time with a three-way conversation on your wireless phone.

1. While on the first call, press the Right Soft Key  Options, select New call and then Dialer and dial the 10-digit number of the second person.

2. Press the Send key . The first person is automatically put on hold while the call is made.

3. When the second person answers, press the Right soft key  Options, then press the 2 key Merge calls to create a conference call.

4. To end both conversations completely, press the End/Power key .

Note Call Waiting and Three Way calling are network supported services. Options may vary. Additional changes may occur. Contact your service provider for additional information.


Caller ID

Caller ID displays the number and/or name and picture (if applicable) of the person calling when your phone rings.

Entering text

Text input

The following key functions are available to help with text entry:

Right soft key : Press to see message screen.

Options, select new message, Select


Press left soft key  to change the text input mode

Next: Select different options to display other matching words in the database in T9 Word mode.

 Shift: Press to change capitalization (Lowercase, Initial cap, Caps lock)

 Key Space: Press to insert a space.

 Clear: Press to delete a single space or character. Press and hold to delete entire words.


 Left soft Key Punctuation: Press right soft key, then 6 to insert punctuation symbols when using Abc text input mode.

Text Input Modes

In a text field, press the Left soft key  to select a text input mode: T9 Word / abc / Abc / ABC / 123 / Symbols

Making Phone Calls

Placing a Call from Home Screen: Press keypad to input number and press the call key  to initiate call.

Place a Call from Contacts: Press Contacts key, scroll down or using Navigation bar search and press call key  to initiate call.

Answering or Rejecting a Call

When you receive a call the caller ID information will be shown. If the phone is closed, it will automatically answer the call once you flip it open.

If the phone is already flipped open, you can:

Answering Calls: Select Answer or press send key,  to answer the call.

Rejecting/Ending Calls: Select Ignore or press end  to ignore or end call.

Recent Calls

The Recent Calls app is a list of the last phone numbers or Contact entries for calls you placed, accepted, or missed. It's continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

1. Press  key to see the list of recent calls

2. Use the Navigation key to scroll left/right to display your call records by call type:

Missed calls: Calls you did not answer.

Received calls: Answered calls and Rejected calls

Dialed calls: Outgoing calls.

All calls: All calls that you missed, received, and dialed.

3. Calls display the date, time and contact or phone number. If the number is saved as a contact, the call record includes icons to indicate the type of number.

4. Use the Navigation key  to highlight a call, then choose from these options:

Press the Left soft key  Message to send a message.

Press the OK key  View to view additional call details.

Press the Right soft key  Options for these options:

– **Add to Contacts:** Save the caller's phone number as a new contact.

– **Delete:** Delete the highlighted call record.

– **Delete multiple:** Select all calls you want to delete.

– **Lock:** Block or unblock calls from the highlighted phone number.

– **Add to call rejection:** Save number to add it to call rejection.

Making calls using Call logs

1. From the Home screen, press the OK key , Menu, then press up/left Call history, OK.

OR

From the Home screen, press Send key  to view the call logs screen.

2. Find a call from All calls, Missed calls, Dialed calls, or Received calls.




3. Use the Navigation key  to highlight a call record, and then press Send key .

Creating or updating Contacts using Call logs

1. From the Home screen, press the OK key , Menu, then press up/ left Call history, OK .

OR

From the Home screen, press the Send key  to view your Call logs.

2. Use the Navigation key  to find and highlight a call record (from All calls, Missed calls, Dialed calls, or Received calls), press the Right soft key  Options, then press the 1 key  Add to Contacts.

3. Use the Navigation key  to highlight number:

1.Add contacts, Select, Create new contact, Select, add contact information then press the OK key to Save.

OR to update contact, 1.Contact details, Select, Edit, make changes and then press the OK key to Save.

4. Save the number to a contact entry, as necessary.

Deleting Recent calls records

1. From the Home screen, press the OK key , Menu, then press up/left, Call history

OR


From the Home screen, press the Send key  to view your Call logs.



2. Use the Navigation key  to find and highlight a call record (from All calls, Missed calls, Dialed calls, Received calls), press the Right soft key  Options, then select the 2 Delete, Select, Yes.

Deleting all Recent calls records

1. From the Home screen, the OK key , Menu, then press up/left. Call history

OR

From the Home screen, press the Send key  to view your Call logs.

2. Press the Right soft key , Options, then select 3. Delete multiple, Select, with the navigation key  select calls you want to delete, press Select on each one, press Delete, Yes.

Press the Right soft key , Options, then select 1.Select all, Select, Delete, Yes.

4. Press the Left soft key , Delete, Yes to delete one by one.

Contacts

The Contacts app allows you to store names, phone numbers and other information in your phone's memory.

Adding a new contact

Allows you to add a new contact to your Contacts list.

NOTE: Using this method, the number is saved as a new Contact, not into an existing Contact.

1. From the Home screen, Press the OK key , Menu and then press up/right, Contacts.


OR



Press the Left soft key  Contacts.

2. Press the Right soft key  Options.

3. Press the 1 key New contact.

4. Enter the contact's name.





5. Press Down Navigation key  to scroll to the phone number type field, then enter the number.

6. Use the Navigation key  to scroll to other fields and enter additional contact information as necessary, then press the OK key , Save to save the entry.


Adding a new contact from Recent calls

1. From the Home screen, press the Send key  to display your recent calls.


2. Use the Navigation key  to highlight a recent call entry.

3. Press the Right soft key  Options. use the Navigation key  to select 1. Add to contacts, Navigation key  to Select, 1.Create new contact, Navigation key  to Select.

4. Enter the name and use the Navigation key  to scroll and enter the contact's information as necessary.

5. When the entry is complete, press the OK key  Save to save the entry.

Deleting a Contact

1. From the Home screen, press the Left soft key , Contacts.

2. Use the Navigation key  to highlight an entry.

3. Press the Right soft key  Options. Use the Navigation key  to select 2. Delete, Navigation key  to Select, Yes.

Editing a Contact

To make changes to an existing contact.

1. From the Home screen, press the Left soft key , Contacts.

2. Use the Navigation key  to highlight a Contact entry, then press the OK key  View.

3. Press the OK key  Edit to make changes.



4. Use the Navigation key  to highlight the field you want to change.

5. Make the changes, then press the OK key  Save to update your contact entry.

Contacts list

When you open the Contacts app, your Contacts list is displayed. In Case of Emergency contacts is displayed above your list of contacts. Add up to 3 emergency entries from your Contacts list. These are entries that someone can contact on your behalf in the event of an emergency, whether or not the phone is locked.

1. From the Home screen, press the Left soft key , Contacts.

2. Use the Navigation key  to scroll through your Contacts alphabetically. Press the Right soft key , Options to select one of the following:

1. Add new contact/ 2. Delete/ 3. Delete multiple / 4. Import/export / 5. Share / 6. Speed dial setup / 7. Remove duplicate / 8. Settings

- Press the Left soft key  Message to send a message.


- Press the OK key  View to view the entry details.


Storing a number with pauses

Pauses allow you to enter additional series of numbers to access automated systems such as Voice mail or credit billing numbers. Pause types are:


Wait (;) The phone dials the phone number, but does not advance to the next series of digits until the user releases the pause. When the prompt, "Send the following tones?" appears, use the Navigation key to highlight Yes, then press the OK key Select.

2-Sec Pause (,) The phone waits two seconds before dialing the next series of digits.

1. From the Home screen, enter the phone number, then press the Right soft key , Options.

2. Use the Navigation key  to highlight Add 2-sec pause or Add wait, then press the OK key  Select.

3. Enter the additional number(s) (e.g., pin number, credit card number, etc.).

4. When you're finished, press the Right soft key , Options.

5. Press the 1 key Add to Contacts.

6. Choose Create contact or Update contact.

7. Use the Navigation key  to scroll and enter the contact's information as necessary.

8. When the entry is complete, press the OK key  Save to save the entry.



Favorites


Allows you to add Contact entries to your list of Favorites to easily view, call, or send messages.

1. From the Home screen, press the Left soft key , Contacts.

2. Use the Navigation key  to highlight Favorites and then press the OK key  View.

3. Press the OK key  Add.

4. Use the Navigation key  to scroll through your contacts alphabetically and press the OK key  Select for each of the entries to add.

5. Press the Left soft key  Done. Once you have added Contacts to your Favorites list, the following options will become available in the Favorites menu:

OK key  : View

Left soft key  : Message

Right soft key  : Options to access 1.Add / 2.Remove

Groups

Allows you to view your grouped Contacts, add a new group, change the name of a group, or delete a group.



1. From the Home screen, press the Left soft key  Contacts.

2. Use the Navigation key  to highlight Groups, then press the OK key .

3. View a Group

Use the Navigation key  to highlight a group, then press the OK key .

Add a New Group

Press the Right soft key  1. New Group to add a new group to the list. Enter a name and press the OK key  Save.



Options when viewing a group

Press the Right soft key  Options to select one of the following:

1. Edit / 2. Delete


Press Left soft key  Options to select Message, use the Navigation key  to scroll and select contacts, Done. Start text

Adding contacts to a group

1. Open your Contacts list, select Groups, Ok key  to View, then use the Navigation key  to highlight the group name.

Press the OK key  View, then press the Right soft key  1. Edit.

Press the Right soft key  Options, then press the 1 key Add contacts.


2. Highlight the desired contact(s), then press the OK key .

3. Press Left soft key  Done.

Speed Dials

Speed dials are 1- or 2-digit shortcuts you assign to specific contact entries to allow you to quickly call the contact.

Assigning a Speed dial

1. From the main keypad Press any number for 3 seconds to set up the speed dial then press OK key .

2. Use the Navigation key  to highlight a phone number, then press the Right soft key .

3. Use the Navigation key  to highlight Set Speed Dial, then press the OK key .



4. Set the Speed Dial digit using the Navigation key  to highlight it, then press the OK key .

Removing a Speed dial

1. From the Home screen, press the Left soft key  Contacts.

2. Use the Navigation key  to highlight a Contact entry, press the Right soft key  Options.

3. Press the 6 key Speed dial to open the Speed dial list.

4. Use Navigation key  to highlight a contact, press the Left soft key  Remove

5. Press the Left/Right soft key  Yes / No

In Case of Emergency (ICE)

In Case of Emergency contacts is displayed above your list of contacts. Add up to 3 emergency entries from your Contacts list. These are entries that someone can contact on your behalf in the event of an emergency, whether or not the phone is locked.

Assigning emergency contacts

1. From the Home screen, press the Left soft key  Contacts.


2. Use the Navigation key  to highlight In Case of Emergency, then press the OK key .

3. Use the Navigation key  to highlight Contacts name, then press the OK key .

4. Use the Navigation key  to highlight each desired contact, then press the OK key .

5. Use the Navigation key  to highlight a contact, then press OK  to View.

To unassign an ICE contact

1. From the ICE Contacts screen, press the Right soft key  Remove, then press Yes or No to remove.


2. Entering your ICE emergency info

1. From the Home screen, press the Left soft key  Contacts.

2. Use the Navigation key  to highlight In Case of Emergency, then press the OK key .

3. Use the Navigation key  to highlight Personal info, then press the OK key .

4. Press the OK key .

5. Enter information that would be helpful in an emergency (e.g., your Health record, Allergies), then press the OK key .



Message

The Message app is preloaded on your phone which allows you to send messages (Text, Picture, and Voice). Depending on the type of message you choose to send, you can also attach files to your messages including pictures, videos, sounds, voice recordings and name cards.



1. From the Home screen, press the OK key  Menu, then using the Navigation key select Message .

or

From the Home screen, press the Right soft key  Message.

2. To view an already started conversation thread, use the Navigation Key  to highlight a conversation thread, then press the OK Key (key image)  to view it.

or

Press the Right Soft Key (key image)  Options, press OK Key (key image)  to select New message to start a new message.

Enter the information required (recipient, text, content, etc.), then press the OK Key (key image)  Send to send the message.

Internet

The Internet app allows you to access news, sports, weather, and email from your device. Accessibility and selections within this feature are dependent upon your service provider. For specific information on Internet access through your phone, contact your service provider.

From the Home screen, press the OK key  Menu, then press down/left, Browser, OK

Press the Left soft key  Tabs to view your open tabs and allow you to switch between them.

Press the OK key  View to go to the web address.

Press the Clear key  to go back to the previous page in your browsing history.




Press the Right soft key  Options for these options:

History – History: View recently-viewed pages.

1. **Refresh:** Reload the current web page.
2. **Bookmark page:** Save the URL of the current page as a bookmark.
3. **Top**
4. **Screenshot**
5. **Share page** – Share: The current URL is copied allowing you to share it using Message, or you can save it to your clipboard.
6. **Add page** – New tab: Create a new tab.
7. **Home** Go to your home URL
8. **Add Bookmarks:** Quickly and easily access saved bookmarks or create a favorite bookmark page.

Entering a URL


Manually enter a URL (web address) to go directly to the web page you want. Or, you can use the Navigation key to select one of the suggestions that appear as you begin to type.

1. From the Home screen, press the OK key  Menu, then press down/left, Browser, OK.
2. Press the Up Navigation key  to move the cursor to the URL Address field, and enter the web address.
3. Press the OK key  Go to go to the web address.

Navigating through the Internet

On-screen items appear in one of the following ways:

Links embedded in content

You can act on options or links on a web page by moving the cursor over it, then pressing the OK key .

Scrolling


Use the Navigation key  to scroll in any direction on the page.

NOTE: When you press and hold the OK key on a web page, you can conveniently use the scroll page function to scroll.

Fast scrolling



Press and hold the Navigation key to quickly move the cursor up and down on the current screen.

Soft keys

Use the Soft keys  (just below the display screen) to access special functions that apply to the current selection (when available). They may change depending on the page and/or selection.

Entering Text, Numbers, or Symbols




When prompted to enter text, you can enter the necessary characters from your phone's keypad using the text mode of your choice (T9 Word, abc, Abc, ABC, 123, or symbols).

- To enter an uppercase character, press the (star) key 
- To insert a space press the 0 key
- To insert symbols, press the Hash tag key 

Deleting Text/Number Entered

When entering text or numbers, press the Clear key  to clear the last number, letter, or symbol.

Initiating a Phone Call From the Internet

You can make a phone call from the Internet if the site you're using supports the feature. Using the Navigation key , place the cursor over the phone number you want to call, press the OK key . Go to go to the call screen, then press the OK key  Call to make a call.

Changing between tabs





1. While viewing a web page, press the Left soft key  Tabs.
2. Use the Navigation key  to highlight an open tab (indicated by a blue border), then press the OK key  Select.

Closing tabs



1. While viewing a web page, press the Left soft key  Tabs.
2. Press the Right soft key  Close tab

Camera

You can use the Camera to take and share pictures



1. From the Home screen, press the camera Key 
- Use the Left and Right Navigation key  to Zoom in and Zoom back out.
 - Press the Right soft key  Options to access , Size, Self - timer, Auto review, Shutter sound, Storage
 - Press the Left soft key  Gallery to open the Gallery app.





Taking a photo

1. From the Home screen, press the Camera Key 
2. Hold the phone and point the lens towards the subject of the photo.
3. Press the OK key  to take a photo. Your picture will be automatically saved to the Gallery

Gallery







The Gallery app presents all of the pictures stored in your phone,

1. From the Home screen, press the OK key  Menu.
2. Press left Gallery, OK key .

- Use the Navigation key  to highlight one of the thumbnail images, then press the OK key  View to open the picture
- Press the Right soft key  Options to access options Send, Set as, Delete, Crop, Details
- Press the Left soft key  Guide to access options Full screen, rotate (left), rotate (right), Zoom out, Zoom in.








Sharing content

You can select one (or more) photos to share. After selecting the file(s), select Share to open the available sharing options (such as Message), then complete as necessary.

1. From the Home screen, press the OK key  Menu, then press down/left, Browser, OK.
2. Press the Up Navigation key  to move the cursor to the URL Address field, and enter the web address.
3. Press the OK key  Go to go to the web address.
4. Press the Right soft key  Options, then press the 1 key Send.
5. Use the Navigation key  to select a sharing option.
6. Press the OK key  OK then complete the sending method as necessary.

Assigning pictures

After taking a picture, assign it as a picture ID for a Contacts entry or as the background image (wallpaper) for your Home screen.





1. From the Home screen, press the OK key  Menu.
2. Press left Gallery .
3. Use the Navigation key  to highlight a desired photo.
4. Press the Right soft key  Options, then press the 2 key Set as.
5. Use the Navigation key  to select Wallpaper or Contact photo, press the OK key  to Select.
 - Wallpaper Assigns the picture as the background image. Crop the image as necessary.
 - Contacts Assigns the picture to a Contact entry as a picture ID. Crop the image as necessary.
6. Use Left and Right Soft keys  to adjust the crop box, then press the OK key  Done.

Music



Your phone has a music player that lets you play all of your favorite tracks.

Use the USB cable that came with your phone to transfer music files to your phone or download music files directly to your phone.

Playing a song

1. From the Home screen, press the OK key  Menu, then press the Media center.
2. Press the 2 key Music player.
3. Use the Navigation key  to select a song in the Music library.
 - Scroll up and down through categories.
4. Press the OK key  to View then press the OK key  Play to play the song.

Music player

1. From the Home screen, press the OK key  Menu, then press the Media center.
2. Press the 2 key Music.
3. Use the Navigation key  to select a song in the Music library.
 - Repeat: Set the repeat mode (Off, One song, or All songs).
 - Shuffle On: Set the shuffle mode (toggle it on or off).
 - Add to playlist: Create or update playlists to organize your music files into sets of songs, which you can play in the order you set or in a shuffle.
 - Share: Share the selected song using Message.
 - Set as ringtone: Set the selected song as your phone ringtone.
 - Delete: Delete the selected song.
 - Details: View information about the selected song.

Ringtones





Allows you to set the default ringtone for your phone.

1. From the Home screen, press the OK key  , down, right, Tools & settings, select OK
2. Press the 2 key Settings
3. Press 3 Sound settings
4. Press 3 Phone ringtone,
5. Use the Navigation key  to highlight a ringtone.

Press the OK key  to Set it as your phone's default ringtone.



Tools Calendar

The Calendar app allows you to keep your agenda convenient and easy to access. Simply store your appointments and your phone will alert you with a reminder you set.




1. From the Home screen, press the OK key  , down, right, Tools & Settings.
2. Press the 1 key Tools
3. Press the 2 key Calendar.
4. Use the Navigation key  to highlight the scheduled day.
5. Press the Left soft key  New event.
6. Enter the Event name, then scroll down to set the remaining settings.
7. Highlight a Calendar setting field, then press the Left soft key  Set.


For each Calendar event you can set:


- Event name
- Location
- All day check box
- Date and time
- Description
- Time zone
- Repeat / Repeat ends
- Reminders
- Reminder sound

8. Use the Navigation key  to highlight the setting you want, then press the OK key  Save when the Calendar entry is complete.

Editing, deleting and sharing calendar entries



1. Open the Calendar app, use the Navigation key  to select the day you want to view, then press the OK key  View.
2. Press the OK key  View again (if the day has multiple events, select the entry first).






Press the Left soft key  Edit to edit the calendar entry.

Press the Right soft key  Options, then press 1. Go to, 2. View mode, 3. Delete, 4. Search event, 3. Settings.



Alarm

The Alarm app allows your phone to function as an alarm clock. At the alarm time, your alarm will be displayed on the screen and the alarm will sound.



To stop the alarm sound, open the flip, then press the Left soft key  Dismiss or the Right soft key  Snooze.

1. From the Home screen, press the OK key  right, down, Tool & settings, select OK.
2. Press the 1 key Tools
3. Press the 3 key Alarm.
4. Press the Left soft key , New Alarm to add an alarm for the first time.
5. Use the Navigation key  to highlight the information you want to set, then press the Left soft key  Set to view your setting choices.
6. Enter the alarm information including:
 - Turn On/Off • Set Time
 - Repeat • Snooze
 - Type • Alarm tone
 - Volume
7. Press the OK key  Save after setting all of the Alarm fields as necessary.

How to delete alarms






1. From the Alarm clock list, press the Right soft key  Options.
2. Press the 1 Key to turn off
3. Press the 2 key to delete the highlighted alarm
4. Press the 3 Key to Delete all alarms
5. Press Left/Right soft keys  to select Yes or No

How to edit alarms

1. From the Alarm clock list, use the Navigation key  to highlight the alarm you want to edit.
2. Press the OK key  Edit and make your changes as necessary. Press OK to Save.






World Clock

Allows you to determine the current time in another time zone or country.

1. From the Home screen, press the OK key  right, down, Tools & Settings, select OK.
2. Press the 1 key Tools.
3. Press the 6 key World clock.
4. press the OK key  to add.
5. Enter a city or state in the search bar, then use the Navigation key  to highlight the city or state you want to add.
6. Press the OK key  Select.
7. Press Left soft key  Done






Timer

The Timer app alerts you with an audible signal when a set amount of time has passed.

1. From the Home screen, press the OK key  right, down, Tools & Settings, select OK.
2. Press the 1 key Tools
3. Press the 4 key Timer.
4. Press Right soft key  Options, 1.Add, use the Navigation key to enter the amount of time you want to set, then press OK key to Set.
5. Press the OK key  Start to start the timer.
6. Press Left soft key  to Reset, OK key  to Stop/Start





Stopwatch

The Stopwatch app allows you to use your phone as a typical stopwatch.





1. From the Home screen, press the OK key  right, down, Tools & Settings, select OK.
2. Press the 1 key Tools
3. Press the 5 key Stopwatch.
4. Press the OK key  Start to initiate the stopwatch.
 - Press the Left soft key  Split to record Split times.
5. Press the OK key  to Stop/Pause timing.
6. After time has stopped, press the Right soft key  Reset.

Calculator

The Calculator app allows you to perform simple mathematical calculations.







1. From the Home screen, press the OK key  right, down, Tools & Settings, select OK.
2. Press the 1 key Tools
3. Press the 1 key Calculators.
4. Press the 1 key Calculator
5. Enter the number to get the value you want. To clear entered items, press the C key  Clear.
6. Use the Navigation key  to enter an operation between numbers and press the OK key  for the result

NOTE: To insert a decimal, press the Star key . To DEL, press C . To insert +, press 0 key .

- Press the Up Navigation key  for +.
- Press the Down Navigation key  for -.
- Press the Right Navigation key  for ÷.
- Press the Left Navigation key  for X.









Notepad

Allows you to add, read, edit, and erase notes to yourself.

1. From the Home screen, press the OK key  right, down, Tools & Settings, select OK.
2. Press the 1 key Tools
3. Press the 7 key Notepad.
 - Press the Left soft key  New note to write a new note, then press the OK key  Save when you're finished.
 - Use the Navigation key  to highlight an existing note, press the OK key  View, then press the OK key Edit.
 - Press the Right soft key  Options to access Edit, Delete, Send, Search.


File Manager




Use the File manager app to easily view and manage your folders and files stored in your phone. When you open File manager, all of your phone's internal storage file folders are displayed.

1. From the Home screen, press the OK key  Media Center Menu, press OK key .
2. Press the 3 key File manager.
 - Use the Navigation key  to select content within a folder, then press the OK key  Open to open it. Repeat until you access the content you're looking for.
 - Press the Clear key  to back out one level at a time.
4. Use the Navigation key  to select a folder, then press the OK key  to open the folder and view its contents.
5. Press the Right soft key  Options to access Copy, Move, Delete, Sort, Rename, Add folder, and Details.

Wireless & networks

The Wireless & networks menu allows you to configure and manage your device's wireless radio communications.

1. From the Home screen, press the OK key  right, down, Tools & Settings, select OK.
2. Press the 2 key Settings .
3. Press the 1 key Wireless & networks.

1. From the Wireless & networks menu screen, press the 1 key Airplane mode.
2. Use the Navigation key  to highlight On or Off, then press the OK key  to Set.
3. Press the Clear key  to exit.

Wi-Fi

1. From the Wireless & networks menu screen, press the 2 key Wi-Fi.
 2. Use the Navigation key to highlight a Wi-Fi network, then press the OK key Connect to connect to it.
- NOTE: Press the Left soft key Turn On/Off Wi-Fi.
3. Press the Right soft key Options to access the following Options to manage your Wi-Fi connections.

- Press the 1 key Add network: Allows you to manually add a Wi-Fi network by entering its name (SSID), security, and password.
- Press the 2 key Saved networks: Displays your saved Wi-Fi networks allowing you to manage them.

This menu will be shown when a Wi-Fi network is added via using 2 key Add Wi-Fi menu.

- Press the 3 key Advanced: Provides additional specific Wi-Fi connection settings:
- Press the 1 key Show Wi-Fi pop-up: Enable this option to display
- Press the 2 key Wi-Fi notification: Enable this option to be notified if Wi-Fi networks are available nearby.
- Press the 3 key Avoid bad Wi-Fi connections: Enable this option to use the mobile network when the connected Wi-Fi network doesn't have a signal.
- Press the 4 key Keep Wi-Fi on when screen is off: Allows you to set the Wi-Fi status when the screen is off.
- Press the 5 key Install certificates: Allows you to install certificates from storage.
- Press the 6 key WPS Push button: Provides information to connect to a secured Wi-Fi network with a WPS button.
- Press the 7 key WPS Pin Entry: Provides the WPS PIN to connect to a secured Wi-Fi network.

Bluetooth

1. From the Wireless & networks menu screen, press the 3 key Bluetooth
2. Press Ok key to Select. Turn on to pair and connect with other Bluetooth devices. All Bluetooth devices that are within your phone's range will be listed. Use the Navigation key to highlight a device to pair and connect.
3. Press the Right soft key Options to access the following options:


- Press the 1 key to Refresh Bluetooth
- Press the 2 key Rename my device: Allows you to change your phone name for easy identification when pairing and connecting.
- Press the 3 key Show received files Displays a list of the files received via a Bluetooth device.

Cellular networks

1. From the Wireless & networks menu screen, press the 4 key Cellular networks to set various network settings.
2. Select an available network setting and set it to your preferences.

- Press the 1 key Mobile data access: Enable this option to allow data access over the mobile network.
- Press the 2 key Data usage: Allows you to manage your mobile data usage (e.g., disconnect from the mobile network to stop using mobile data. Its options include Data usage (viewed on a graph), Limit data usage, Data usage alert and Monthly usage cycle.
- Press the 3 key Data roaming access: Enable this option to allow data roaming.
- Press the 4 key Network mode: Allows you to search for networks as well as set automatic network selection.
- Press the 5 key Access Point Names
- Press the 6 key Network operators.

Emergency alerts

1. From the Wireless & networks menu screen, press the 5 key Emergency alerts to view emergency alerts and customize your emergency alerts settings.
2. Press the left soft key  Settings to view and change its settings.

Accessibility


The Accessibility menu provides settings to make your phone easier for you to use based on your personal capabilities and/or limitations.

1. From the Home screen, press the OK key  right, down, Tools & Settings, select OK.
2. Press the 2 key, Settings.
3. Press the 2 key, Accessibility.


Readout

1. From the Accessibility menu screen, press the 1 key Readout, press OK key  to Select, turn On/Off.


Speech rate

1. From the Accessibility menu screen, press the 2 key
2. Use the Navigation key  to select Slow, Normal or Fast



Speech pitch

1. From the Accessibility menu screen, press the 3 key
2. Use the Navigation key  to select Very low, Low, Normal, High, or Very High


Font size

1. From the Accessibility menu screen, press the 4 key Font size.
2. Use the Navigation key  to select Normal or Large


Color inversion

1. From the Accessibility menu screen, press the 5 key Color inversion to allow you to invert the screen colors for higher contrast.
2. Use the Navigation key  to select On or Off, then press the OK key .



Color correction

1. From the Accessibility menu screen, press the 6 key Color correction to allow you to adjust the screen's hue and contrast.
2. Press 1 Key to select On/Off
3. Press 2 Key Correction mode to select Deuteranomaly (red-green), Protanomaly (red-green), or Tritanomaly (blue-yellow), then press the OK key  to Set.

Persistent alerts



1. From the Accessibility menu screen, press the 7 Key Persistent alert
2. Select your preference(s) using the Navigation key  to highlight your choice Audible tone or Vibrate, then press Left soft key to Turn On

Mono audio

1. From the Accessibility menu screen, press the 8 key Mono audio to allow you to set the phone to play the same sounds through both earpieces of a connected device so you can hear everything with just one ear.
2. Use the Navigation key  to select On or Off, then press the OK key  to Set.

TTY mode

Allows you to attach a TTY device enabling you to communicate with parties also using a TTY device. A phone with TTY support is able to translate typed characters to voice. Voice can also be translated into characters and then displayed on the TTY.

1. From the Accessibility menu screen, press the 9 key TTY mode.
2. Use the Navigation key  to highlight a TTY mode, then press the OK key  OK to select it:
 - TTY Off: Users send and receive without TTY equipment.
 - TTY Full: Users who cannot talk or hear send and receive a text message through TTY equipment.
 - TTY HCO: Users who can hear but cannot talk send a text message and receive voice through TTY equipment.
 - TTY VCO: Users who can talk but cannot hear receive a text message and send voice through TTY equipment.

Real-time text (RTT) call


1. From the Accessibility menu screen, press the 0 key Real-time text (RTT) call, press OK key to Select, turn On/Off.

| Mode | User | Capability | Transmission/ Receiving Mode | When making communications with a non-TTY terminal |
|-----------|----------------------------------|--------------|---|--|
| TTY Off | | | | |
| TTY Full | For hearing/verbally impaired | | Text message transmission, text message receiving | Operator required |
| TTY + HCO | For verbally impaired | Audible | Text message transmission, voice receiving | Operator required |
| TTY + VCO | For hearing impaired | Able to talk | Voice transmission, text message receiving | Operator required |

Connecting TTY Equipment and a Terminal

1. Connect a TTY cable to the TTY connection on the phone (TTY connection location is the same as a headset jack).
2. Access the phone's Settings menu and set the desired TTY mode.
3. After setting a TTY mode, check the screen of the phone for the TTY icon.
4. Connect the TTY equipment to the power source and turn it on.
5. Make a phone connection to the desired number.
6. When connection is made, use the TTY equipment to type in and send a text message or send voice.
7. The voice or text message from the receiver end will appear on the TTY equipment display.


Sound settings

1. From the Home screen, press the OK  right, down, Tools & Settings, select OK.
2. Press the 2 Key settings.
3. Press the 4 Key Sound settings




Volume

1. From the settings menu screen, press the 1 key Master Volume.
2. Select a Volume setting and set the level to your preference using the Volume key up-down and OK key



Also vibrate for calls off

1. From the Sound settings menu screen, press the 2 key Also vibrate for calls.
2. Use the Navigation key to select On or Off, then press the OK key Set to select it.
3. Press the Clear key  to exit.





Phone Ringtone

1. From the Sound settings menu screen, press the 3 key Phone Ringtone to set the ringtone for calls.
2. Use the Navigation key  to highlight a desired ringtone, then press the OK key  Set to select it. Press up and down to listen to a highlighted ringtone.
- Press the Clear key  to exit.




Vibration pattern

1. From the Sound settings menu screen, press the 4 key Vibration pattern.
2. Use the Navigation key to select Off or Pattern 1 to 5, then press the OK key  Set to select it.
3. Press the Clear key  to exit.




Notification sound

1. From the Sound settings menu screen, press the 5 key Notification sound to set the sound played for new notifications.
2. Use the Navigation key  to highlight a desired sound, then press the OK key  Set to select it.
 - Press the up and down to listen to a highlighted ringtone.
 - Press the ok Key  to set.
3. Press the Clear key  to exit.




Alarm Sound

1. From the Sound settings menu screen, press the 6 key Alarm sound.
2. Use the Navigation key  up and down to select , then press the OK key  Set to select it.
3. Press the Clear key  to exit.




Keypad Volume

1. From the Sound settings menu screen, press the 7 key Keypad Volume
2. Use the Navigation key  to select then press volume side key to set up, then press OK key  Set to select it.
3. Press the Clear key  to exit.




Keypad Tone

1. From the Sound settings menu screen, press the 8, Keypad tone
2. Use the Navigation key  to select type then press OK key  Set to select it.
3. Press the Clear key  to exit.




Vibration on keypad

1. From the Sound settings menu screen, press the 9 key, Vibrate on keypad
2. Use the Navigation key  to select On or Off, then press the OK key  Set to select on , off
3. Press the Clear key  to exit.

Battery charging tone

1. From the Sound settings menu screen, press the 0 key ,Battery charging tone
2. Use the Navigation key  to select On or Off, then press the OK key  Set to select on , off
3. Press the Clear key  to exit.

Battery charged tone

1. From the Sound & notifications menu screen, press the * key ,Battery charged tone
2. Use the Navigation key  to select On or Off, then press the OK key  Set to select on , off
3. Press the Clear key  to exit.

Emergency tone

Allows you to view emergency alerts and customize your emergency alerts settings.

From the Sound settings menu screen, press the # key Emergency tone.

Off: Allows you to disable the alert related with emergency dialing.



Alert: Allows you to set an alert tone same as the volume level on your phone.

Vibrate: Enable this option to emit the vibration instead of providing an alert tone.



Display

1. From the Home screen, press the OK key  right, down, Tools & Settings, select OK.
2. Pres the 2 key, Settings
3. Press the 5 key, Display settings.

Brightness level

1. From the Display menu screen, press the 1 key, Brightness level.
2. Use the Navigation key  to adjust it, then press the OK key  Set.



Wallpaper

1. From the Display menu screen, press the 2 key, Wallpaper.
2. Select a Wallpaper type and highlight your preference using the Navigation key , then press the OK key  Select (crop and save the image, if necessary).



Press the 1 key, Preloaded.

Press the 2 key, Gallery.



Display backlight

1. From the Display settings menu screen, press the 3 key, Display backlight to set the amount of time before the screen times out due to inactivity to conserve your battery power.
2. Use the Navigation key  to highlight your choice, then press the OK key  Set.

Key backlight

1. From the Display settings menu screen, press the 4 key, Key backlight to set how long the keypad remains lit.
2. Use the Navigation key  to highlight your choice, then press the OK key  Set.

Font size

1. From the Display settings menu screen, press the 5 key Font size to set the font used for the phone software.
2. Use the Navigation key  to highlight your choice, then press the OK  key, Set.




Main Clock

1. From the Display settings menu screen, press the 6 key Main clock to set clock displayed on the Home screen.





2. Use the Navigation key  to highlight your choice, then press the OK key . Set.

Phone Settings


The Phone settings menu allows you to designate specific settings to customize how you use your phone.

1. From the Home screen, press the OK key  right, down, Tools & Settings, select OK.
2. Press the 2 key , Settings.
3. Press the 5 key , settings.





Language

1. From the Phone settings menu screen, press the 1 key , Language to set the language for your phone's software.
2. Use the Navigation key  to select your choice, then press the OK key  key, Set to select it.
3. Press the Clear key  to exit.


Navigation Keys

Shortcuts are available from the Home screen. Simply press the Navigation key  up, down, right or left to open one. You can change the shortcut for each key and also change the shortcuts provided from the Shortcut menu (the Right Navigation key by default).

Setting Navigation key shortcuts

1. From the Phone settings menu screen, press the 2 key , Navigation keys
2. Use the Navigation key  to highlight a shortcut key you want to set.
3. Press the up, down to see the available shortcuts. Use the Navigation key  to highlight one, then press the OK key  Set to select it.


Storage

1. From the Phone settings menu screen, press the 3 key , Storage to view your phone's storage memory information (in text and on a bar graph).


USB connection

You can connect your phone to your PC to charge it and transfer items to the PC from the phone (and vice versa).




Transferring music, photos, and videos

1. From the Phone settings menu screen, press the 4 key  USB mode.

2. Use the Navigation key  to highlight Media device, then press the OK key  OK.

3. Connect your phone to a PC using the USB cable included with your phone.
4. You can now view the mass storage content on your PC and transfer files.
5. After transferring files, return to the Phone settings menu, press the 4 key  USB connection and change the setting to Charging before disconnecting the USB cable.


Location

1. From the Phone settings menu screen, press the 5 key , Location to set the GPS (Global Positioning System: Satellite assisted information system) mode.
2. Use the Navigation key  to highlight On or E911 only then press the OK key  Set to select it.

NOTES


- GPS satellite signals are not always received by the phone, especially under bad atmospheric and environmental conditions, indoors, etc.
- When in Airplane Mode, services supporting Location On functionality will be suspended.




Security

1. From the Phone settings menu screen, press the 6 key , Security to allow you to secure your phone electronically by PIN, encryption or SIM card lock.
2. Select the security option you want to activate.

- 1 key Screen lock type: Allows you to set a PIN to secure your phone from unintentional and/or unauthorized use.
- 2 key Screen lock time: immediately
- 3 key Call r rictions.
- 4 key Reset phone.
- 5 key Encrypt data
- 6 key Others

Reset

1. From the Security menu screen, press the 4 key  Reset phone.
2. Reset phone allows you to erase all data from your phone's internal storage and restore the phone to default system settings.

3. Use Navigation key  to scroll down and see currently accounts signed.
4. Press OK key  select to Reset phone.
5. Press Ok key  to select Erase Everything. Warning: once pressed, this cannot be undone.

Date & time

1. From the Phone settings menu screen, press the 7 key Date & time.
2. Select date & time options and set them as necessary.

NOTE: By default the Auto-date & time and Auto-time zone options are enabled. To activate the manual setting option(s), turn off the Auto option(s), then select Set date, Set time and/or Select time zone.

Turn on the Auto-date & time option to use the date/time provided by the network, or select Set date and/or Set time to manually set them.

Turn on the Auto-time zone option to use the time zone provided by the network, or select Select time zone to set it manually.

Use 24-hours format: Turn the Use 24-hour format ON to display the time using the 24-hour format (e.g., 13:00 instead of 1:00 PM).


Advanced calling

1. From the Phone settings menu screen, press the 8 key Advanced calling .
2. Advanced calling options and press OK key to Select, turn On/Off..

Call settings

1. From the Home screen, press the OK key  right, down, Tools & Settings, select
 2. Press 2 key, Settings.
 3. Press the 6 key Call settings.
- Answer options

1. From the Call settings menu screen, press the 1 key Any key answer. Set on, off to set how the phone will answer an incoming call.

2. Use the Navigation key  to select the setting(s) you want to use, then press the  key Set to select.


NOTE: Auto with hands-free is available when any external device is connected to your phone or speaker is set to on.

Flip open / close


1. From the Call settings menu screen, press the 2 key
- 1 Open to answer

2. Close to end on


Auto Answer

1. From the Call settings menu screen, press the 3 key Auto answer
2. Use the Navigation key  to highlight
 1. Hands free
 2. Speakerphone

Quick responses

1. From the Call settings menu screen, press the 4 key to Quick responses
2. Use the Navigation key  to highlight a quick message.

Speed dial

1. From the Call settings menu screen, press the 5 key Speed dial setup to add, view, change, move and remove your speed dial numbers.
2. Use the Navigation key  to highlight a speed dial.

Press the OK key  Set to set up a new speed dial from numbers in your Contacts list.

Press the OK key  Select to add a speed dial.

Press the Right soft key  Remove or OK key  to Replace an existing speed dial.

Voice mail

1. From the Call settings menu screen, press the 6 key Voice mail.
2. Select a Voice mail option.

Press the 1 key Voicemail number to see Voicemail service carrier .

Press the 2 key Sound to set the sound played when new voice mail arrives.

Press the 3 key Vibrate to set when to vibrate for voice mail notifications.



Blocked calls

1. From the Call settings menu screen, press the 7 key Blocked calls to allow you to view and manage your Blocked calls list.
2. Select the action you want.

Press the OK key  Add to add numbers. Manually enter a number.

Press the Right soft key  Remove to delete blocked number.

Auto redial

1. From the Call settings menu screen, press the 8 key Auto redial to allow you to set the length of time the phone waits before automatically redialing a number when the attempted call fails.
2. Use the Navigation key  to highlight the desired setting, then press the OK key Set. Fixed Dialing Numbers
 1. From the Call settings menu screen, press the 9 key Fixed Dialing Numbers.
 2. Turn on the fixed dialing function.

NOTE:

When the fixed dial is started, the SIM card phone book is blocked, and "FDN phone book" appears in the phone book, and the FDN shows the fixed dial number you set. At this point, you cannot dial a phone number other than FDN.



PIN2 is needed to enable (disable) this feature and add (change, remove) FDN Numbers

The fixed number table is stored in the SIM card. The ability to use fixed dial is dependent on the type of SIM card and whether the network provider offers it

Call forwarding

1. From the Call settings menu screen, press the 0 key Call forwarding to allow an incoming call to be redirected to a mobile telephone or other telephone number.
2. Press the 1 key On to enable Call forwarding and enter the designated telephone number.
3. Press the 2 key Off to disable Call forwarding.


Call Timer

1. From the Call settings menu screen, press the * key Call timer to view call durations for the Last call, Dialed calls, Received calls, All calls, Lifetime calls.
2. Use the Navigation key  to highlight a call type, then press the OK key  Reset to reset its counter to zero.

Assisted dialing

From the Call settings menu screen, press the # key Assisted dialing.

Assisted dialing

From the Assisted dialing menu screen, press the 1 key, press OK key  to Select, turn On/Off.

Current country

From the Assisted dialing menu screen, press the 2 key, Display the current country.

Reference country

From the Assisted dialing menu screen, press the 3 key, List some country codes. Search the country code through the search box.

About phone

View information about your phone including My phone number, Status, Network, Hardware information, and Software information.

1. From the Home screen, press the OK key  right, down, Tools & Settings, select OK.
2. Press the 2 key, Settings.
3. Press the 7 key About phone.

Software update

This feature gives your phone the ability to upgrade to the latest software and keeps your phone operating with the latest features. You can either be notified automatically that there is an updated version of software available for your phone, or you can manually check to see if there are any updates available for you to download.

1. From the Home screen, press the OK key  right, down, Tools & Settings, select OK.

2. Press the 2 key, Settings.
3. Press the 8 key Software update.

The two options shown will be Check for updates and Show update history.

Press the 1 key Check for updates to check if any new software updates are available to download. If a newer software version is available.

You can begin the download immediately by pressing the OK key  Download.

Press the 2 key Show update history and see information on the last successful update. If updates have not yet been performed, status information will be unavailable.

Programming Instructions

Initial Activation / Programming Instructions

1. Insert SIM card into SIM card slot per the diagram (page 12)
2. Wait approximately 2 minutes and power the device on
3. The phone will program automatically
4. This process will take approximately 5 to 7 minutes
5. If programming fails, make one attempt to restart the device

Important Safety Information

This booklet contains important operational and safety information that will help you safely use your phone. Failure to read and follow the information provided in this booklet may result in serious bodily injury, death, or property damage.

General Precautions

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and keep in dry place.

NOTE: Your ANS F30 mobile device is not water resistant, and its one year limited warranty does not cover any forms of liquid damage, regardless of source of origin. Please keep this in mind when using your ANS Mobile product.

- Do not expose your phone to direct sunlight for extended periods of time (such as on the dashboard of a car).
- Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending, or sitting on it.
- Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment.

Using Your Phone While Driving

Operating your phone while driving is prohibited in some jurisdictions. Laws vary as to specific restrictions. Remember that safety always comes first.

Following Safety Guidelines

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment. RF signals may affect improperly installed or inadequately shielded electronic operating systems or entertainment systems in motor vehicles. Check with the manufacturer or their representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle. Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.

FCC REGULATIONS

This mobile phone complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This mobile phone has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can emit radiated radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Note:

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Information (SAR)

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the United States. During SAR testing, this device was set to transmit at its highest certified power level in all tested frequency bands, and placed in positions that simulate RF exposure in usage against the head with no separation, and near the body with the separation of 10 mm. Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The exposure standard for wireless devices employing a unit of measurement is known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. This device is compliant with SAR for general population /uncontrolled exposure limits in ANSI/IEEE C95.1-1992 and had been tested in accordance with the measurement methods and procedures specified in IEEE1528. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/ea/fccid after searching on FCC ID: 2ALZM-F30.

For this device, the highest reported SAR value for usage against the head is 0.6 W/kg, for usage near the body is 1.23 W/kg.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirements. SAR compliance for body-worn operation is based on a separation distance of 10 mm between the unit and the human body. Carry this device at least 10 mm away from your body to ensure RF exposure level compliant or lower to the reported level. To support body-worn operation, choose the belt clips or holsters, which do not contain metallic components, to maintain a separation of 10 mm between this device and your body. RF exposure compliance with any body-worn accessory, which contains metal, was not tested and certified, and use such body-worn accessory should be avoided.

Hearing Aid Compatibility (HAC) Regulations for Mobile Phones

In 2003, the FCC adopted rules to make digital wireless telephones compatible with hearing aids and cochlear implants. Although analog wireless phones do not usually cause interference with hearing aids or cochlear implants, digital wireless phones sometimes do because of electromagnetic energy emitted by the phone's antenna, backlight, or other components. Your phone is compliant with FCC HAC regulations (ANSI C63.19- 2011). While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise and phones also vary in the amount of interference they generate. The wireless telephone industry has developed a rating system for wireless phones to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box. The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs. This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. T4 is the better/ higher of the two ratings. (Note that not all hearing devices have telecoils in them.) Your phone meets the M4/T4 level rating.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. For more information about FCC Hearing Aid Compatibility, please go to <http://www.fcc.gov/cgb/dro>.

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer.

Disposal of Lithium Ion (Li-Ion) Batteries

Do not handle a damaged or leaking Li-Ion battery as you can be burned. For safe disposal options of your Li-Ion batteries, contact your nearest Sprint authorized service center. Special Note: Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

American Network Solutions Limited Warranty Period

Your device has been designed to provide you with reliable, worry-free service. If for any reason you have a problem with your equipment, please refer to the manufacturer's warranty in this section.

Warranty Information

American Network Solutions LLC ("ANS") warrants this device is free from defects in material and workmanship under normal use and service for twelve (12) months commencing upon the date of purchase by the first consumer purchaser. If proof of purchase cannot be provided, the manufacturing date as recorded by ANS, based upon the serial number, will be deemed to be the start of Limited Warranty Period.

Limited Warranty Statement

The consumer should never attempt to open or disassemble the device and doing so may cause damage that voids your warranty. The device is equipped with an internal rechargeable battery that is non-removable. This warranty does not cover defects for or resulting from:

1. Improper or unreasonable use or maintenance;
2. Failure to follow operating instructions; accident; excess moisture; insects; lightning; power surges; connections to improper voltage supply;
3. Unauthorized alteration or modification of original condition;
4. Damages caused by inadequate packing or shipping procedures;

- 5.Devices purchased from unauthorized dealers; or
- 6.Devices whose mechanical serial number or electronic serial number has been removed altered or defaced.

During the Limited Warranty Period, ANS will, at its sole option (using new or refurbished replacement parts), repair any defective devices. Repaired devices will be warranted for a period equal to the remainder of the original Limited Warranty on the original device or for NINETY (90) days following the date the repair is completed, whichever is longer. All replaced parts, components, boards and equipment shall become the property of ANS.

During the Limited Warranty Period, ANS will, at its sole option (using new or refurbished replacement parts), repair any defective devices. Repaired devices will be warranted for a period equal to the remainder of the original Limited Warranty on the original device or for NINETY (90) days following the date the repair is completed, whichever is longer. All replaced parts, components, boards and equipment shall become the property of ANS. The Limited Warranty is good only to the original purchaser of the device during the Limited Warranty Period as long as it remains in the United States and is not transferrable or assignable.

Disclaimer of Warranties; Exclusion of Liability Except as set forth in the Limited Warranty contained on the warranty page enclosed with the device, the purchaser takes the device "AS IS", and ANS makes no express or implied warranty of any kind whatsoever with respect to the product, including but not limited to, the merchantability of the product or its fitness for any particular purpose or use; the design, condition or quality of the device; the performance of the product; the workmanship of the product or the components contained therein; or compliance of the product with the requirements of any law, rule, specification or contract pertaining thereto. Nothing contained in the instruction guide shall be construed to create an express or implied warranty of any kind whatsoever with respect to the device. In addition, ANS shall not be liable for any damages of any kind resulting from the purchase or use of the device or arising from the breach of the Limited Warranty, including incidental, special or consequential damages, or loss of anticipated profits or benefits. Further, ANS shall not be liable for the delay in rendering services under the Limited Warranty or loss of use during the time the device is being repaired.

ANS is not liable for performance issues or incompatibilities caused by your editing of registry settings, or your modification of operating system software or any other similar editing, modification or the like to the device.

Using custom operating system software may cause your device and applications to work improperly. Your carrier may not permit users to download certain software, such as custom OS. If your carrier prohibits this, if you attempt to download software onto the device without authorization, you will be notified on the screen that the device will no longer operate and be instructed to power down the device. You must then contact your carrier to restore the device to the carrier authorized settings. ANS disclaims liability for removal or reinstallation of the product, for geographic coverage, for inadequate signal reception by the antenna or for communications range or operation of the cellular system as a whole. When sending your wireless device to ANS for repair or service, please note that any personal data or software stored on the device may be inadvertently erased or altered. Therefore, we strongly recommend you make a back up copy of all data and software contained on your device before submitting it for repair or service. This includes all contact lists, downloads (i.e. third-party software applications, ringtones, games and photos) and any other data added to your device.

In addition, if your wireless device utilizes a multimedia card, please remove the card before submitting the device, and store for later use when your device is returned. ANS is not responsible for and does not guarantee restoration of any third-party software, personal information or memory data contained in, stored on, or integrated with any wireless device, whether under warranty or not, returned to ANS for repair or service.

Customer Service and Warranty Claims

For help with your device or its features, or if you have any questions, please call customer service at 1-844-450-0841 from 8:30am-6:30pm ET, Monday-Friday. Please have your device in front of you when you call.

User guide

Model:F30

